




Mercedes A45 AMG BOV Fitting Instructions




Please use the white spring included in the kit if your vehicle is mapped.


1. Remove the battery cover by sliding forwards and lifting off, re move the positive cover and disconnect the battery.

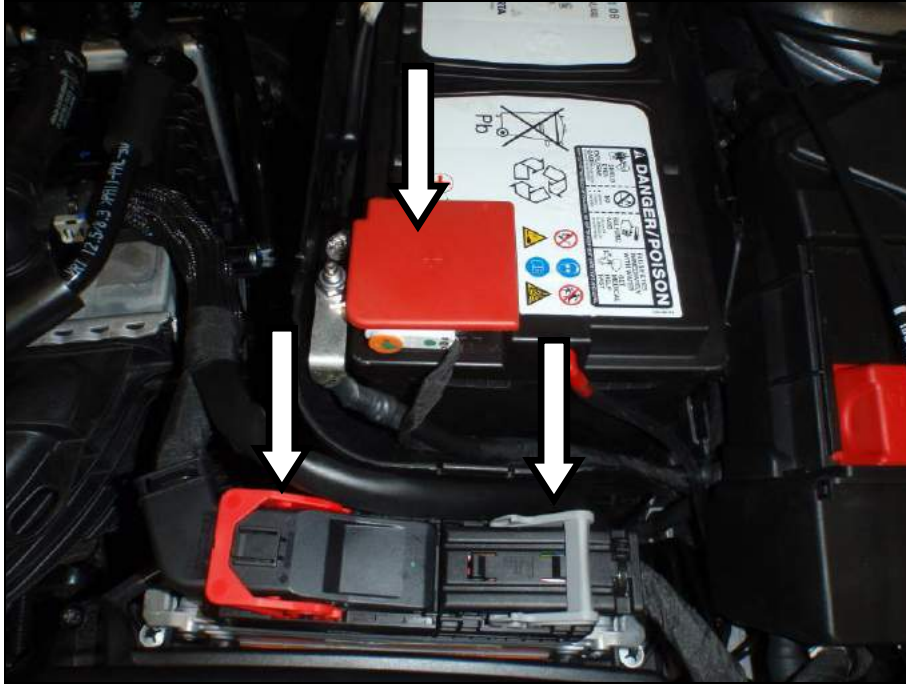

2. Unclip the ECU remove air filter cover and the filter, remove the plastic clips on the cold air scoop and undo the jubilee clips on both ends of the flexible intake hose. Now remove the scoop and filter box undo the bolt attaching the flexible hose and pipes. Rotate the flexible hose and pipes so access to the BOV blanking plate can be removed.

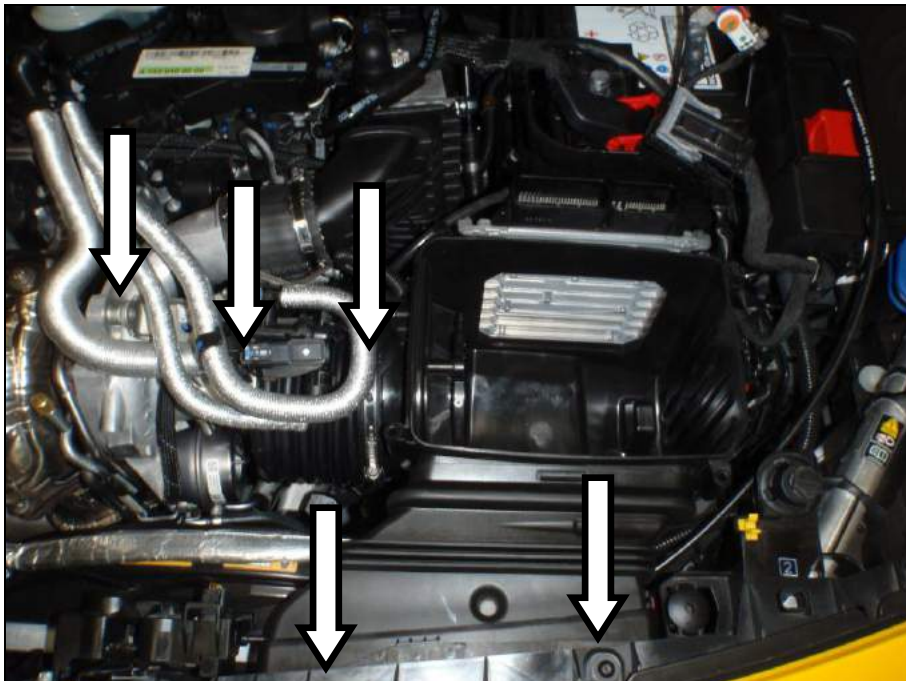

3. Remove the blanking plate.

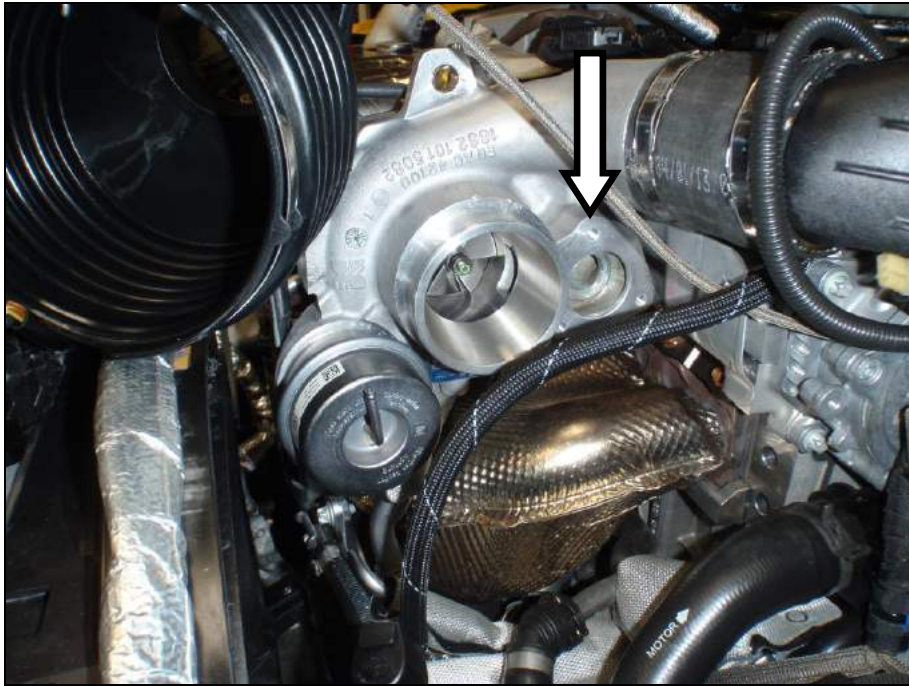


4. Bolt on the BOV with the vacuum port in the position shown below with the vacuum hose going behind the turbo outlet.



5. Zip tie in position the vacuum hose as shown below.



6. At the back of the engine on the inlet manifold next to the throttle body unclip the rubber pipe. Using the silicon hose and coupler supplied in the kit attach as shown and connect to the vacuum hose.

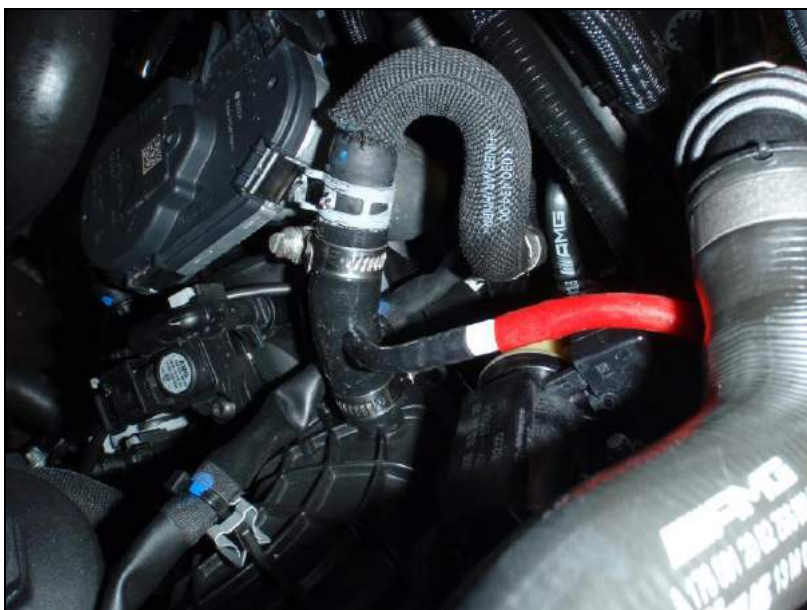

Your installation is now complete refit all the parts taken off in reverse order.

Please contact your nearest Forge Motorsport distributor for our other products for the Mercedes A45, or visit our website www.forgemotorsport.co.uk and www.forgemotorsport.com

ENGINEERED FOR PERFORMANCE

